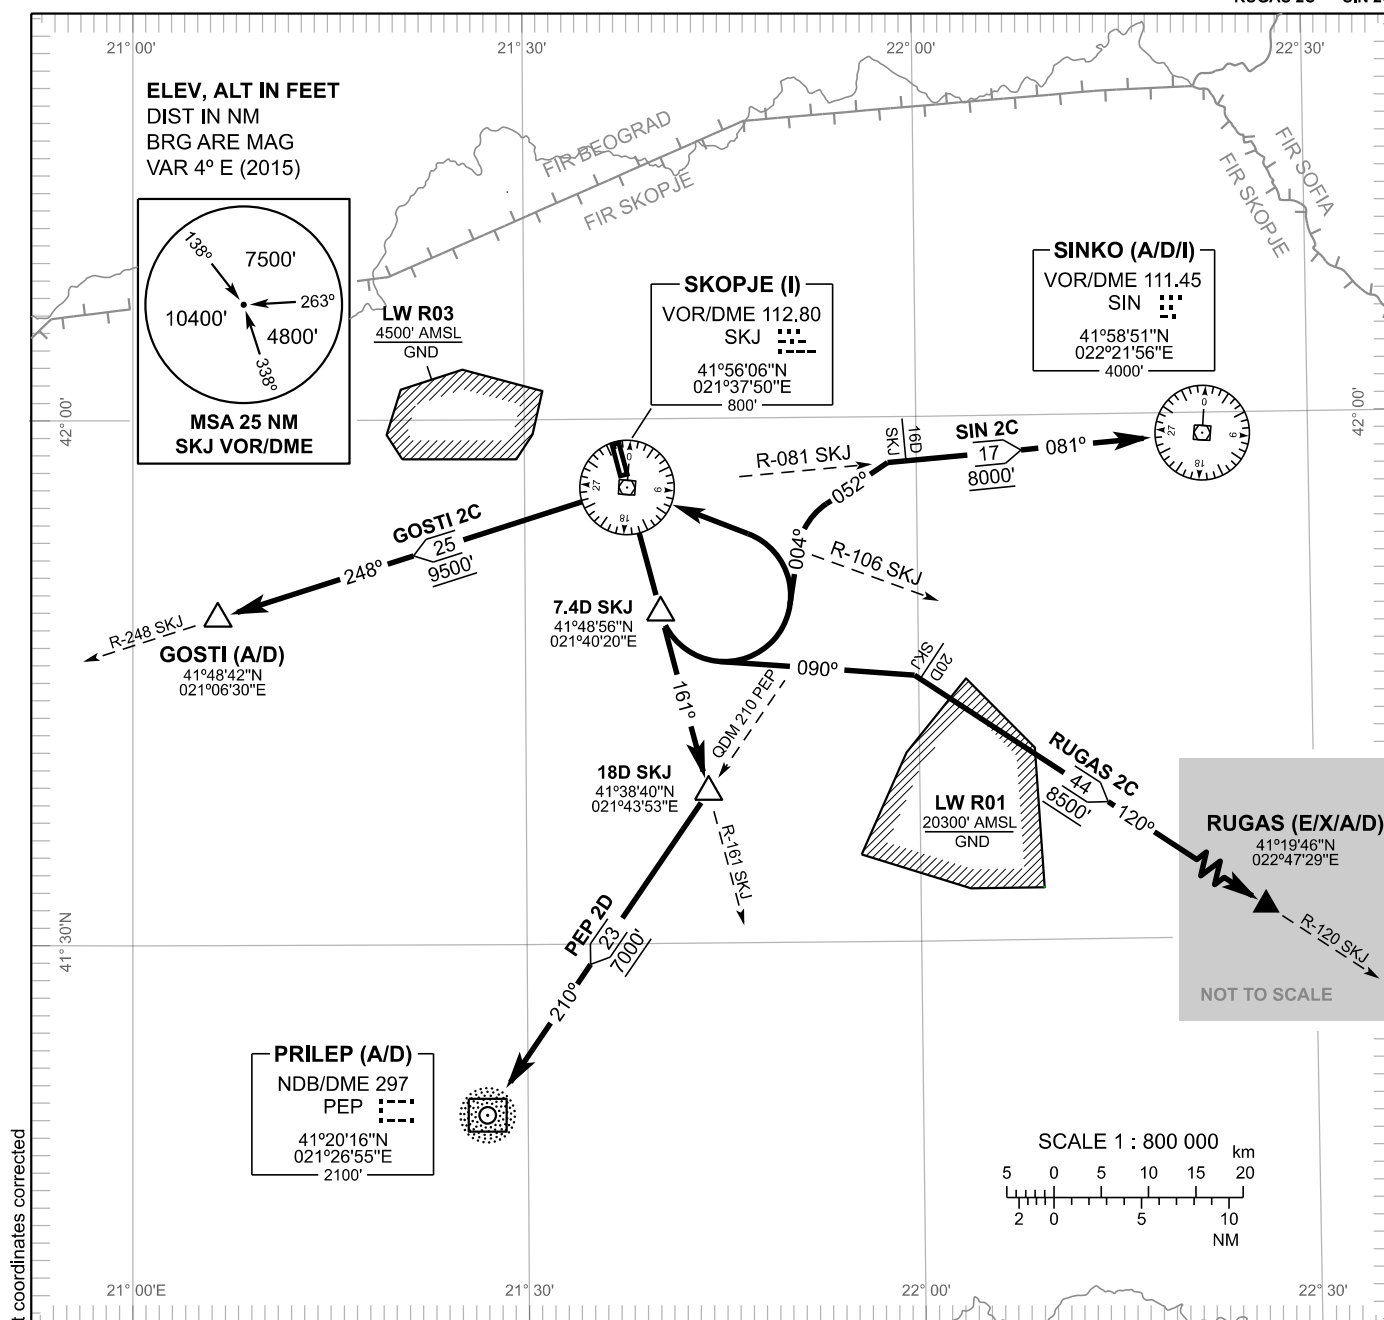


STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAOTRANSITION ALTITUDE
11000'TWR 118.500
APP 120.300
RADAR 120.300SKOPJE / SKOPJE Intl (LWSK)
RWY 16GOSTI 2C PEP 2D
RUGAS 2C SIN 2C

CHANGE: SIN point FRA relevance changed and RUGAS point coordinates corrected

GOSTI 2C	CLIMB GRADIENT 3.9% (237 ft/NM) UNTIL REACHING 2800 ft. GOSTI TWO CHARLIE DEPARTURE: Climb straight ahead. At 7.4D SKJ turn LEFT Inbound SKJ VOR/DME. At SKJ VOR/DME turn LEFT, intercept and follow R-248 SKJ climbing to GOSTI INT.
PEP 2D	CLIMB GRADIENT 3.9% (237 ft/NM) UNTIL REACHING 2800 ft. PEP TWO DELTA DEPARTURE: Climb straight ahead. At 18D SKJ turn RIGHT proceed onto QDM 210 PEP climbing to PEP NDB/DME.
RUGAS 2C	CLIMB GRADIENT 3.9% (237 ft/NM) UNTIL REACHING 2800 ft. RUGAS TWO CHARLIE DEPARTURE: Climb straight ahead. At 7.4D SKJ turn LEFT onto course 090°. Intercept and follow R-120 SKJ climbing to RUGAS INT.
SIN 2C	CLIMB GRADIENT 4.4% (270 ft/NM) UNTIL REACHING 3500 ft. SIN TWO CHARLIE DEPARTURE: Climb straight ahead. At 7.4D SKJ turn LEFT onto course 004°. After crossing R-106 SKJ VOR/DME, turn RIGHT onto course 052°, intercept and follow R-081 SKJ VOR/DME climbing to SIN VOR/DME. NOTE: When using SIN 2C for RAXAD next, arrange flight to be RAXAD at FL160 or above. If not able advise ATC.

INTENTIONALLY LEFT BLANK